

45(1/2)" TV Stand Assembly Instructions



WARNINGS

Choking / asphyxiation hazard: Not for children under 3 years of age.

Small Parts: This unit contains small parts.


Injury hazard: This product patented profile assembly system comprises profiles that are machine cut leaving typical PVC and steel machine cut sharpness at both profile ends. To avoid injuries, handle these profiles carefully while assembling this product. Do not attempt to deform the profiles with your fingers directly and avoid touching your eyes with their ends. Also keep profiles away from children at all times. Once this product is assembled as shown on this instruction manual, injury hazard is no longer present.

Other hazards: Stop potential damage. This product includes wood glue. Though it does not contain formaldehyde, it cannot be treated as food. If you stain your finger tips, avoid touching your mouth, nose, ears or any other parts of your body. Use recommended amounts only. Avoid spilling. Never leave the bottle cap open. Use a paper tissue to remove excess. If you stain your fingertips, clothes or carpets, rinse with water while glue is still liquid. Keep out of the reach of children. Dispose of safely. Do not pour remaining amounts in the sink or down the drain. It may clog your pipes or leach into waterways. Not to confuse the glue with any other substance, do not store excess glue. Let the remains dry on paper tissue and dispose of along with the empty container. In case of ingestion, call a physician.




Made in Mexico by:
Industrias Playcon S.A. de C.V.
Campesinos 411, Col. Santa Isabel Industrial
Iztapalapa, C.P. 09820, Ciudad de México.
Tels.: +52 55 5670 0211


Packing list

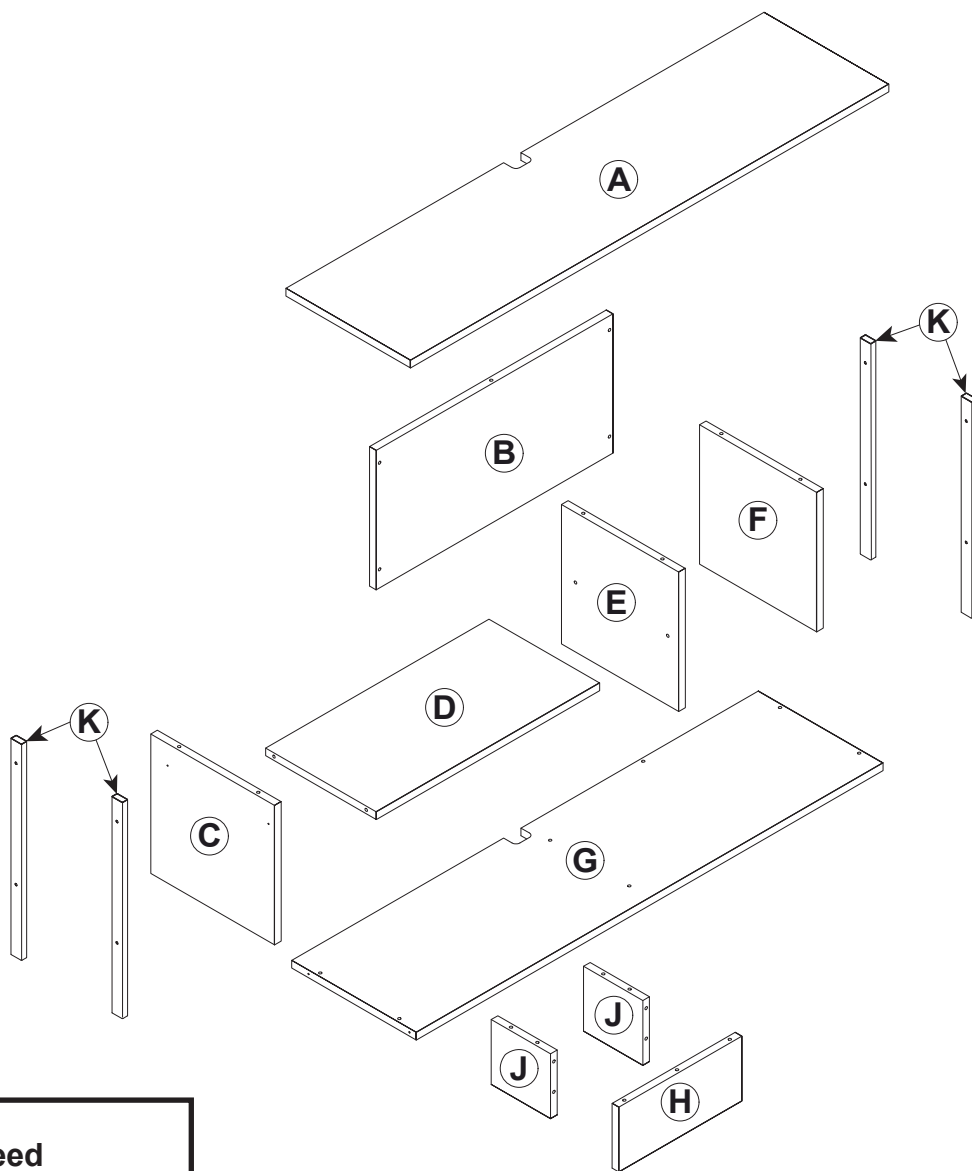

Tools you need

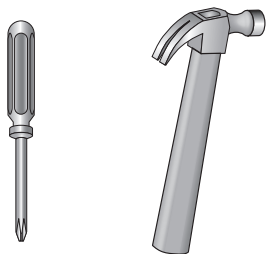


Hardware

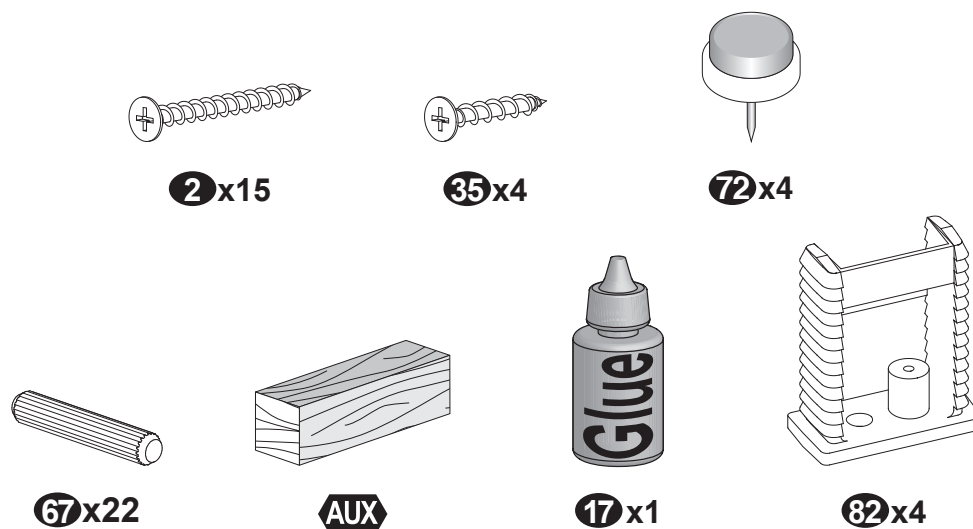



1

Nail all pads **72** to **H** and **J** edges, approximately 1" away from each corner

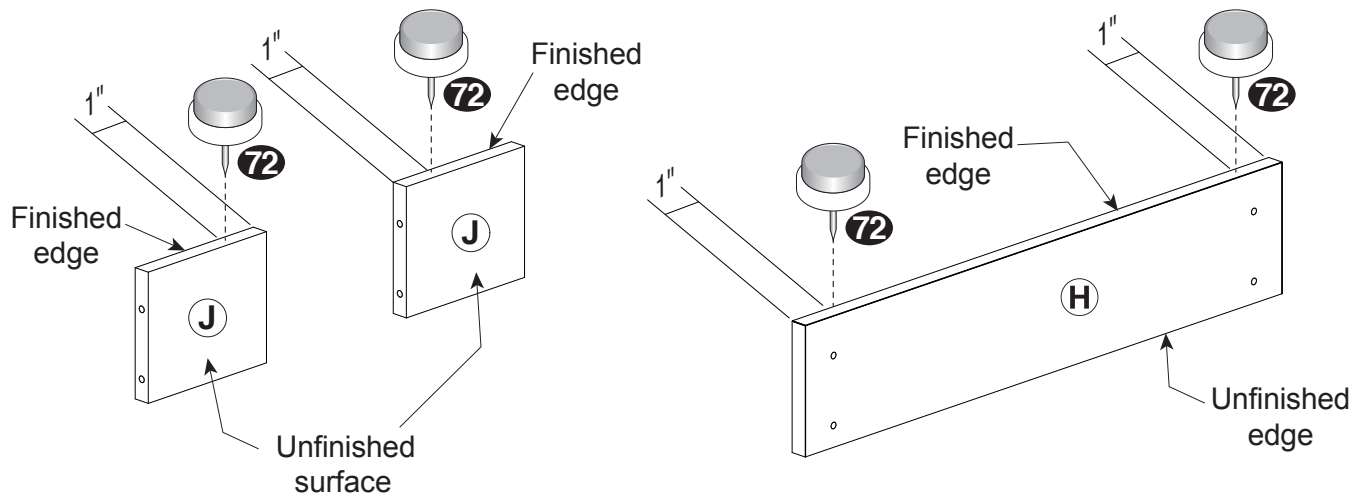


2

Drop a little glue (4 drops per hole) into all indicated holes before inserting **67**

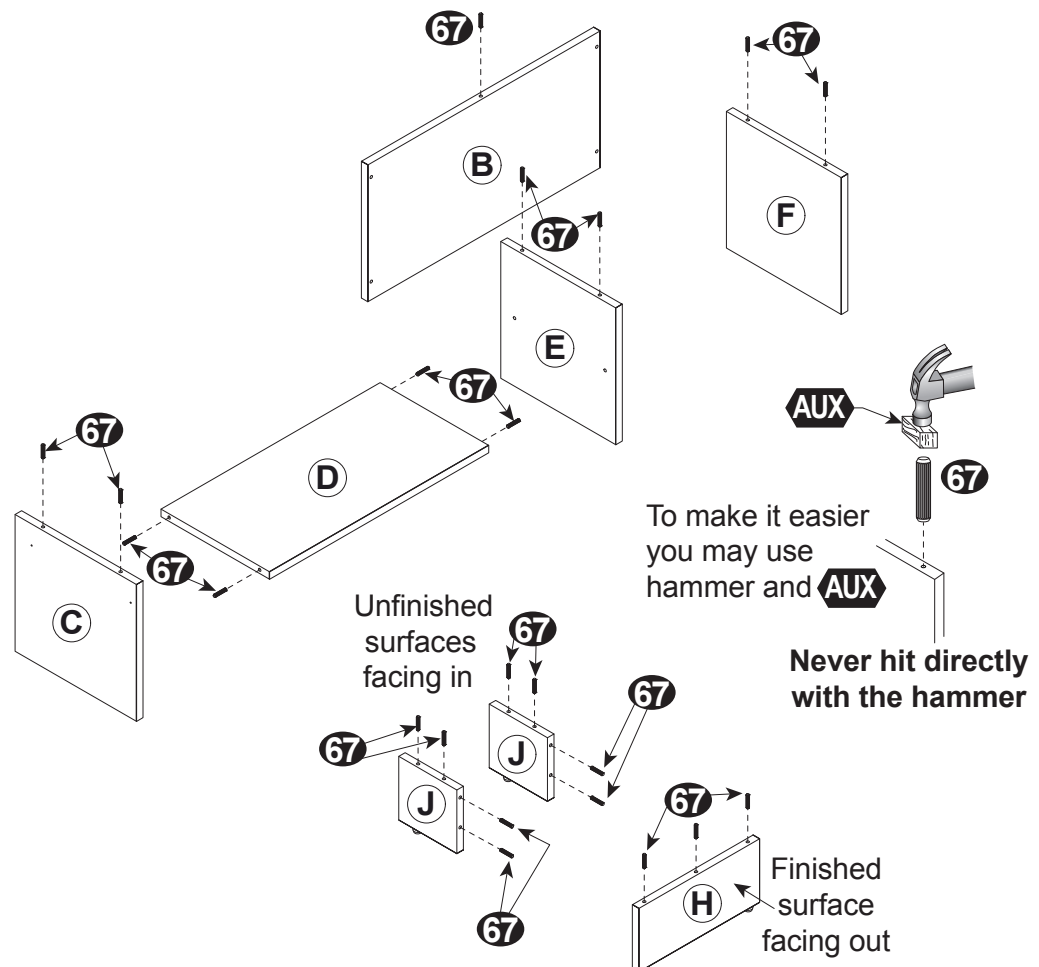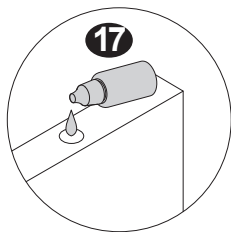


3

Drop a little glue (4 drops per hole) into all indicated holes before inserting 67

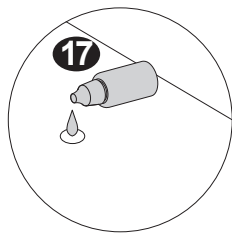



Finished surface

Unfinished

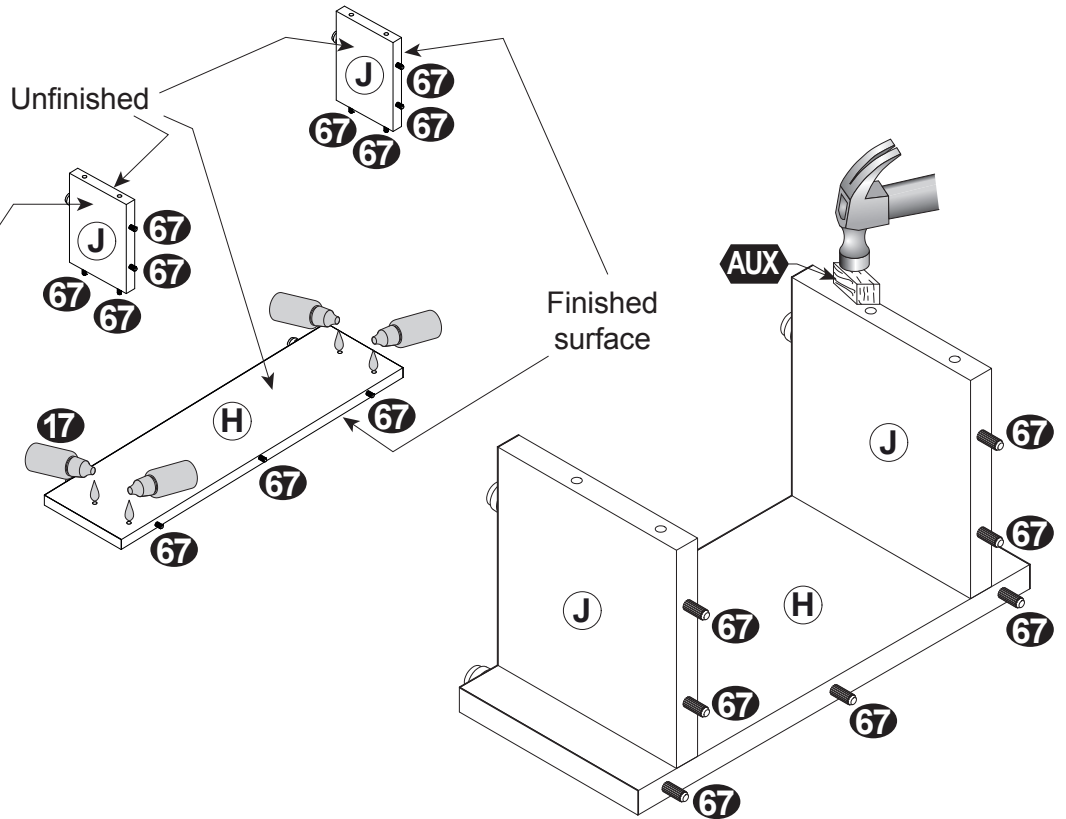


4

Now, assemble back panel (B) to shown vertical panels

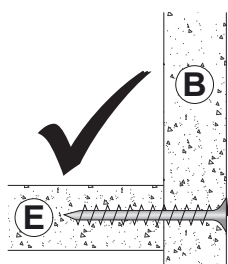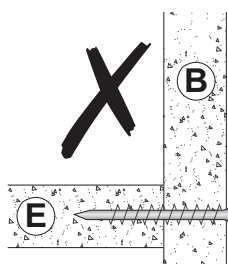



Tighten until flush

Unfinished surface behind

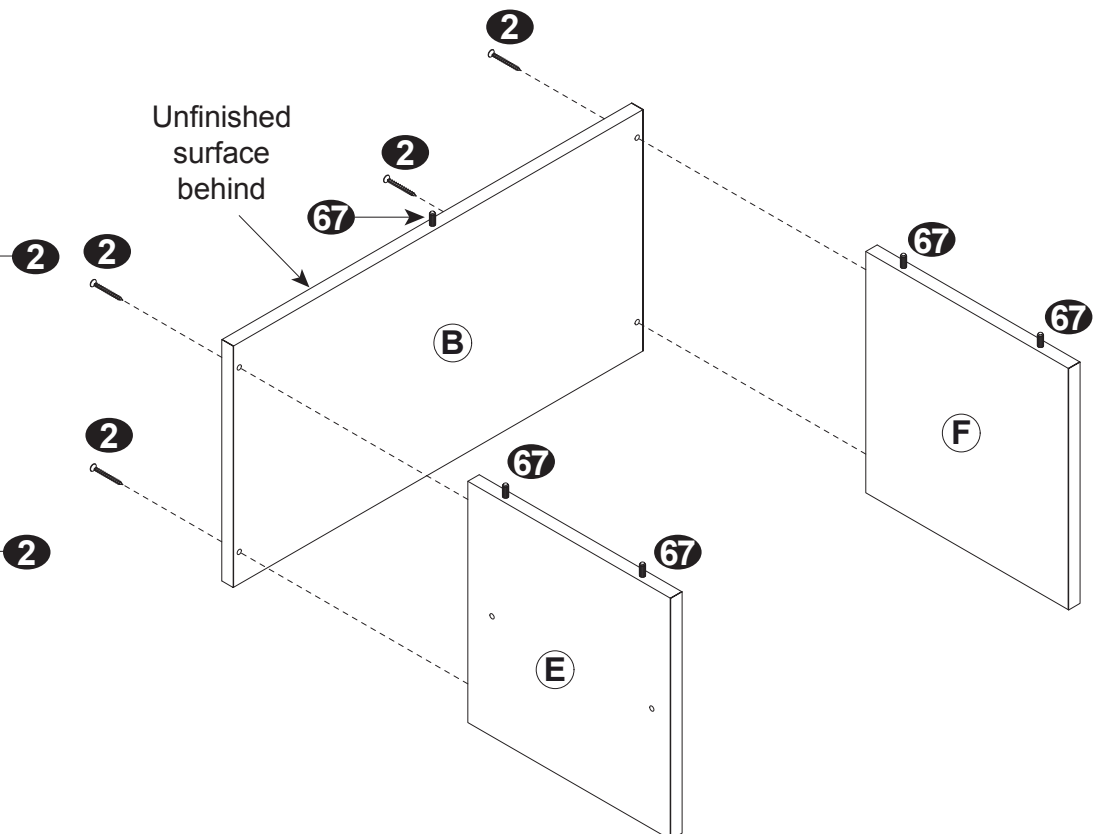



5

Drop a little glue (**4 drops per hole**) into all indicated holes before inserting **67**

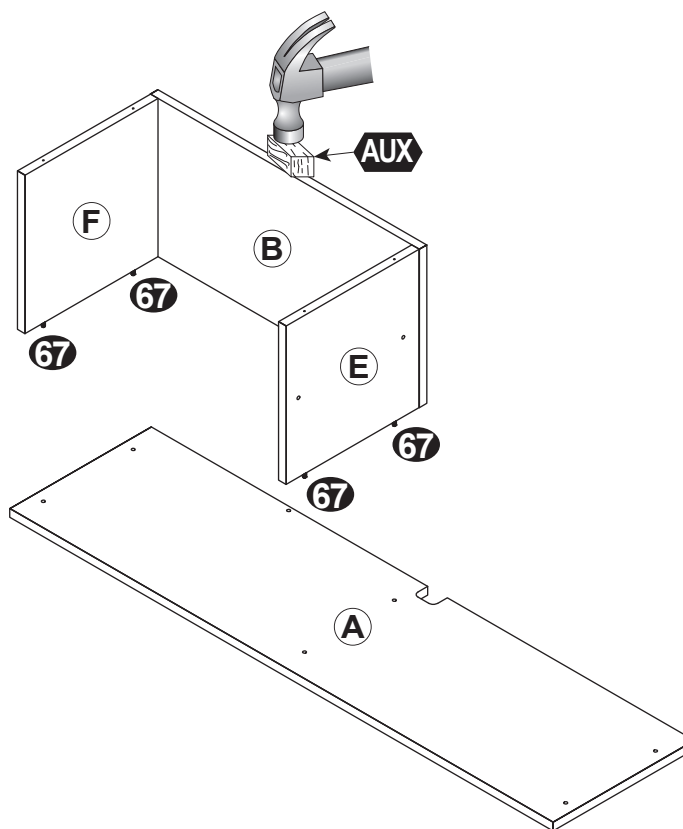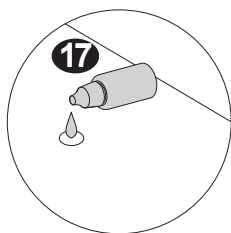



6

Drop a little glue (**4 drops per hole**) into all indicated holes before inserting **67**

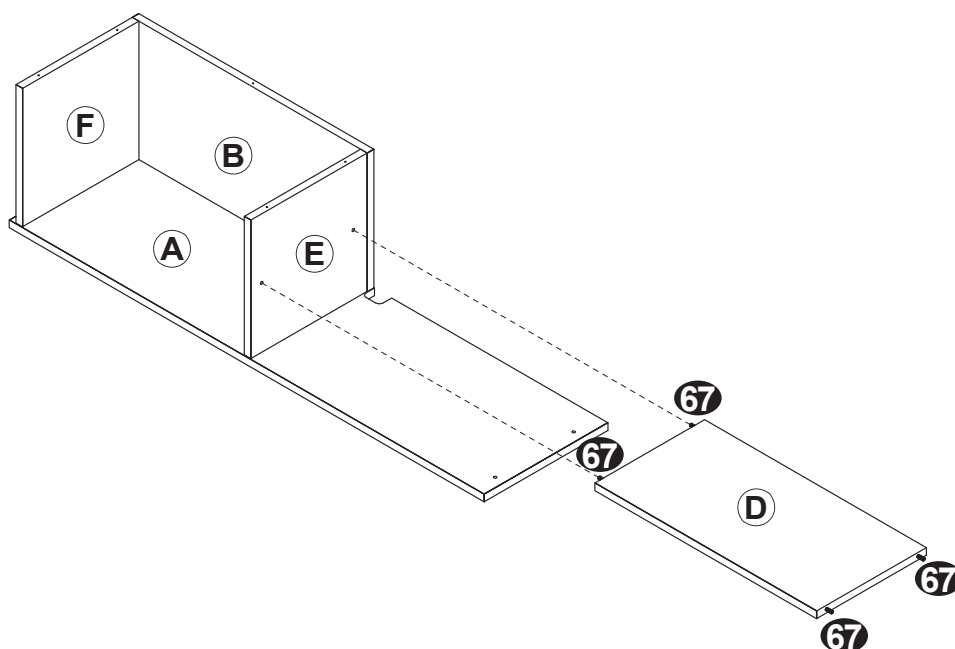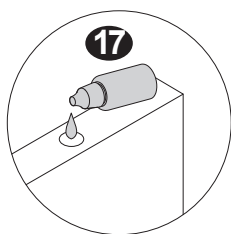


7

Drop a little glue (4 drops per hole) into all indicated holes before inserting **67**

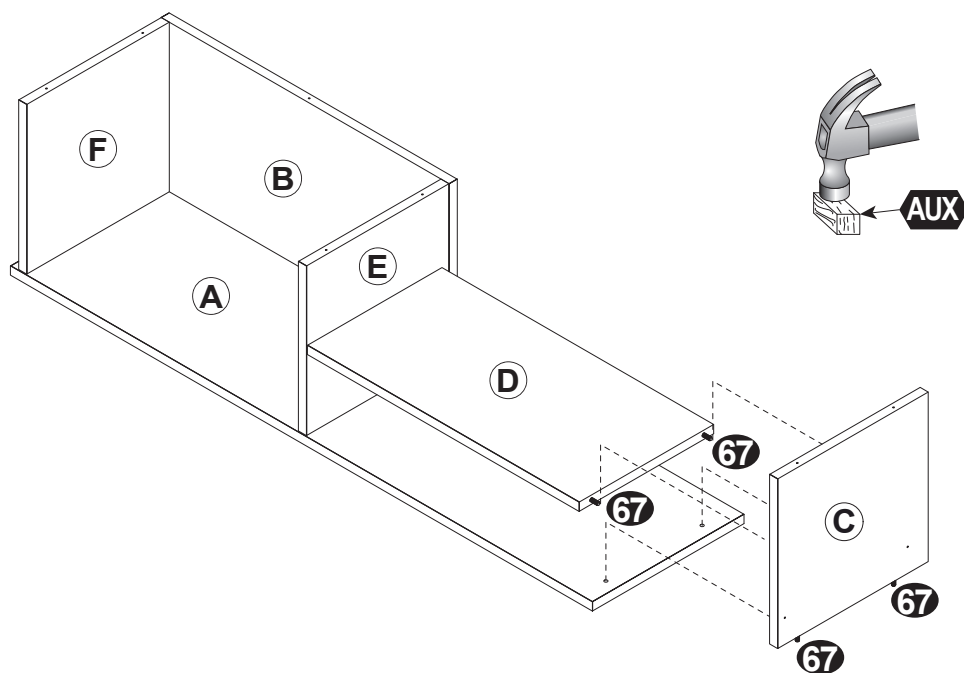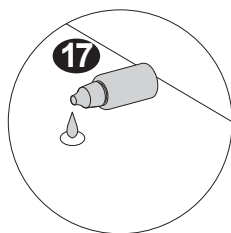



8

Now, assemble bottom panel **G** vertical panels as well as back panel

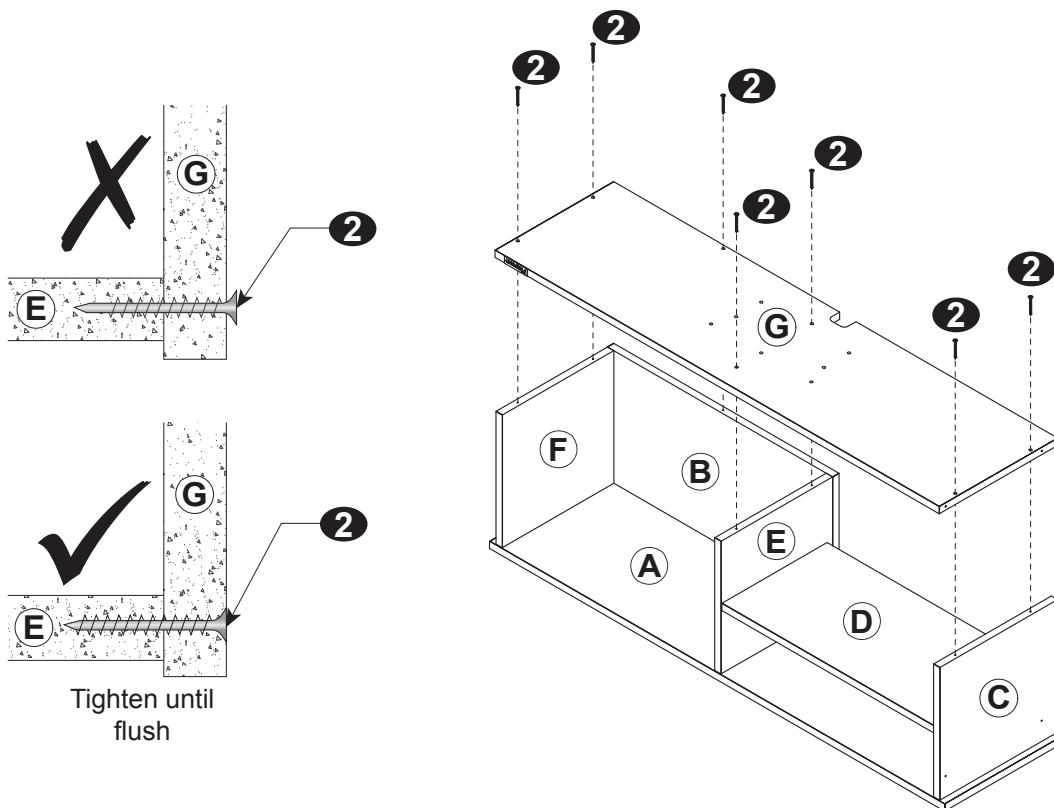

9

Drop a little glue (4 drops per hole) into all indicated holes before inserting 67

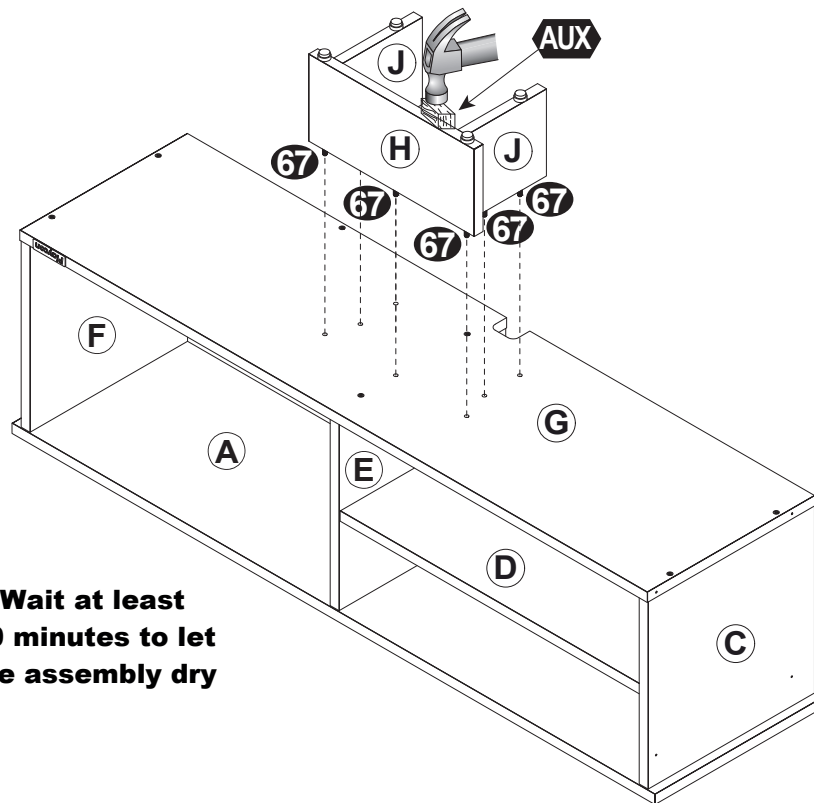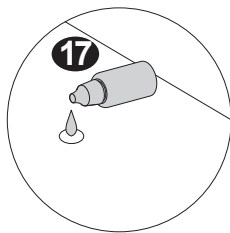


**Wait at least
20 minutes to let
the assembly dry**

10

Once the top box assembly is dry, attach all four rectangular tubes around the assembly

Watch out: screws lengths are different.
Make sure you use the right screw for each joint


Attach two tubes (K) to the left side. Long screws penetrate bottom panel (G)

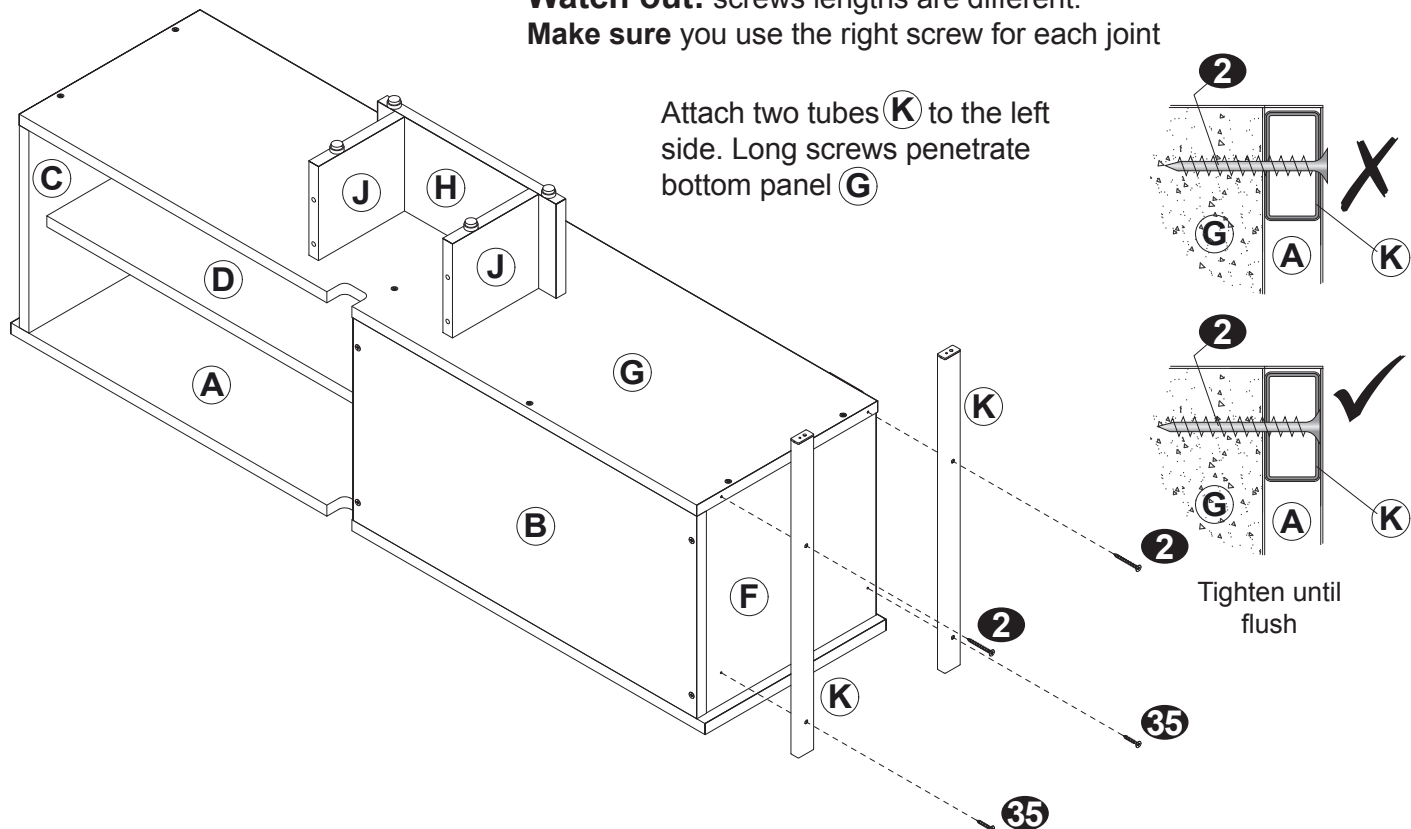

Tighten until
flush

11

Attach the other two tubes **(K)** to the right side

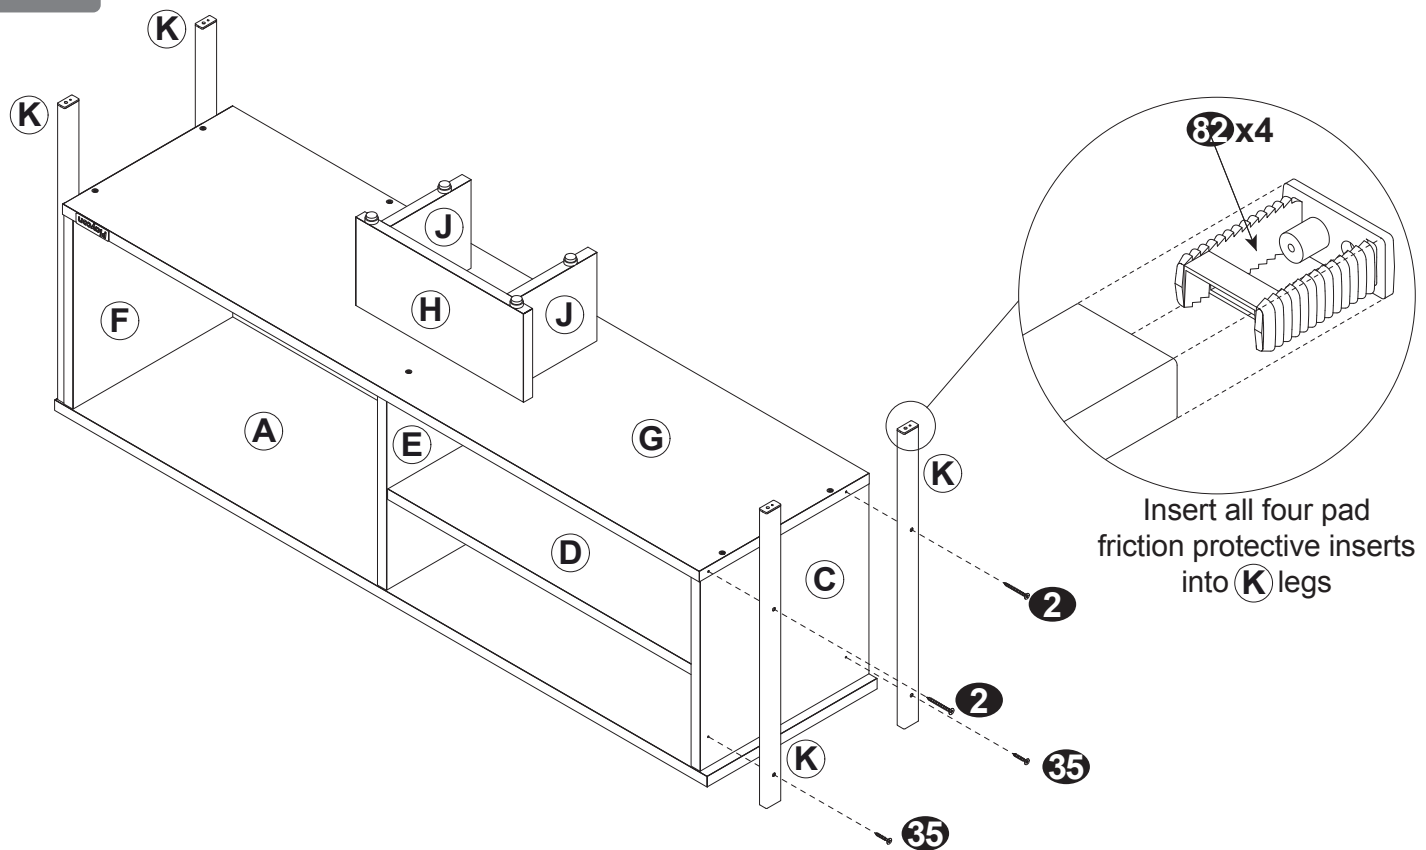

12

Congratulations !

